

TACKLE



DIGITAL TOURNEY SCALE - USER'S MANUAL



Introducing the Tackle HD Digital Tourney Scale! This tournament scale boasts tons of features that are not offered on most scales for the price. The scale is water resistant. It comes with an attached pair of gripper-lock pliers so the fish remain unharmed. It is equipped with a ten fish logging option which allows you to see how much weight you have in the live well. This feature also makes it easier to cull your fish during a tournament. It is also equipped with rubberized side grips which keep the scale from slipping out of your hand. If you are looking for a reliable scale that is built for fisherman by fisherman, then look no further than the Tackle HD Digital Tourney Scale.

Features:

- Digital scale that weighs up to 55 lbs. (25 kg).
- Stores up to ten replaceable weights in memory
- Lighted LCD screen: 1.6" x .0.9" (41 x 23 mm) with blue backlight
- Water resistant
- Units of measurement can be switched between lbs. or kg.
- Can also switch between °F or °C.
- Equipped with a "Hold" function
- Includes 1 x CR2032 battery

Power On/Off

- To power on, press the ON/OFF button and wait for screen to display 0.00.
- To power off, press and hold the ON/OFF button or it will automatically shut off after 60 seconds of no use.

Changing the Battery

- The back of the scale has a twist open cap. Rotate counterclockwise to open and clockwise to close.
- Operates on 1 x CR2032 size battery.

Weighing a Fish

- After powering on and the screen shows 0.00 you can weigh your fish.

Add a Fish Weight to Memory

- After weighing the fish, the scale will keep the weight displayed on the screen. Press the MEMORY button to store that fish weight. It will store it to the next available slot.
- You can store up to 10 weights. Any weight after 10 will automatically replace the smallest weight.

Delete Fish Weight from Memory

- Press the RECORD button until you see the weight that you want to delete. When you are ready to delete press the MEMORY/DELETE button to delete that weight. You will know that the weight has been deleted when the scale reads 0.00.
- To clear out the entire memory, press the RECORD button until you see the letter "E" in the top left corner and press the MEMORY/DELETE button. This will delete all ten weights that are stored.

Switch Between Fahrenheit and Celsius

- When the scale is off press the ON/OFF button and quickly press the MEMORY button twice to select between °F or °C.


Switch Between Pounds and Kilograms

- When the scale is off press the ON/OFF button and quickly press the MEMORY button twice to select between lbs. or kg.

Check Recorded Weights

- Press the ON/OFF button. The scale should read 0.00. Then press the RECORD button twice to see the recorded weights. The number in the top left will be the weight slot that you are viewing.

Screen Diagram

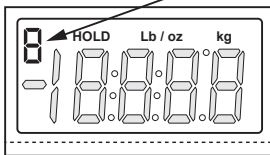

Three letters E, A, C, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9.


E – Total weights of all stored weights

A – Average total of all stored weights

C – Ready to weigh

Use 0, 1, 2, 3, 4, 5, 6, 7, 8, 9.

Possible Errors

- EEEE: Overload (over weight capacity)
-  : Low battery



Tackle HD, One River's Edge Drive, St. Clair MO 63077
888-326-6200

© 2020 River's Edge Products. ALL RIGHTS RESERVED.